


SR 570

EN

Spare parts / Accessories

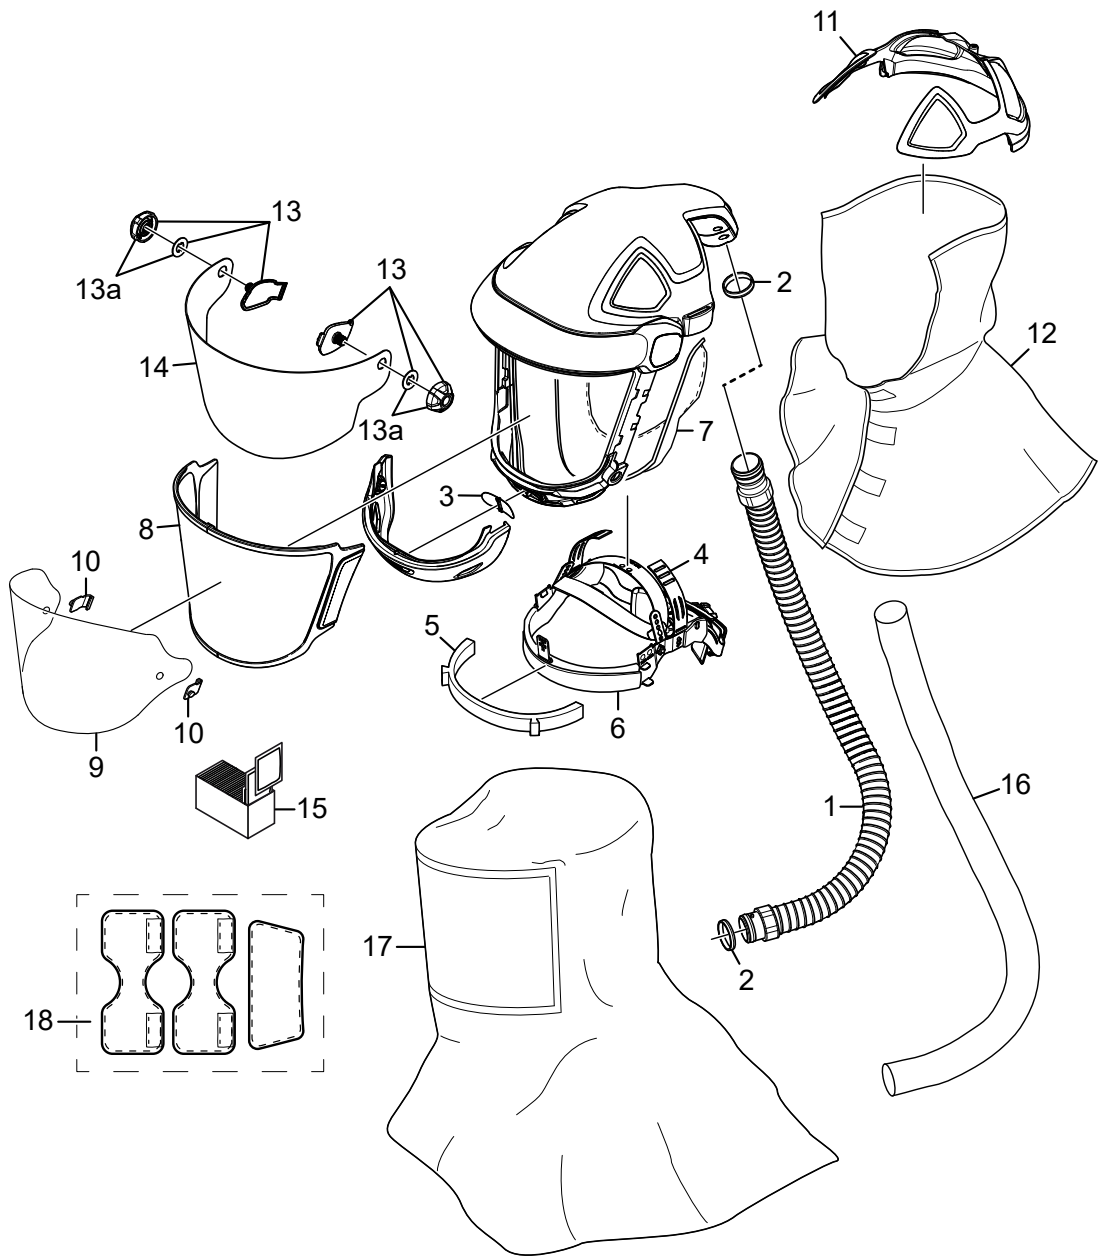

No..	Description	Ordering No.
1.	Breathing hose	R06-0635
2.	Gasket for hose	R01-3011
3.	Exhalation membrane	R06-0614
4.	Head harness	R06-0601
5.	Head harness seal	R06-0610
6.	Sweatband	R06-0602
7.	Face seal Face seal, flame retardant	R06-0603 T06-0611
8.	Visor set, PC	R06-0616
9.	Peel-off 10 pcs Peel-off 100 pcs	T06-0601 T06-0608
10.	Clips for peel off	T06-0607
11.	Bump cap	T06-0602
12.	Neck cover Neck cover, flame retardant <i>Note! T06-0602 is required</i>	T06-0603 T06-0610
13.	Cover with thread and knob	T06-0640
13a	Knob complete	R06-0821
14.	Visor 2/3 EN 5 Visor 2/3 EN 3 <i>Note! T06-0640 is required</i>	T06-0605 T06-0609
15.	Cleaning tissues, box of 50	H09-0401
16.	Hose protection, PE Hose protection, SR 59021	T06-0121 T06-4016
17.	Tyvek Hood SR 586	T06-0806
18.	Comfort kit	T06-0606