

be adjusted before starting operation. The product size is provided directly on the product or on internal label or packaging. Full size range is provided in the tables available on rawpol.com

Cleaning, maintenance and disinfection: Recommendations for maintenance, cleaning are provided on the label of the product. It is recommended to use generally commercially available cleaners, preservatives for each type of material, which does not have negative impact on the user's body. The products, which do not have sewn-in the maintenance, cleaning label, must only be cleaned with damp, soft cloth.

It is not recommended to use any additional methods for disinfection and disinfectants, as this may have impact on reducing levels of protection.

Storage: The product should be stored at the appropriate temperature, in dry and well ventilated place. Too high humidity of air, too high or low temperature or intense light can adversely impact the product quality. Manufacturer accepts no liability for the quality of the product stored contrary to the instructions. This may result in a lowering of the product protection level.

Type of packaging: It is recommended to distribute (including transport) the product in the package with cardboard or plastic film. Loading, transport and unloading should take place in environment protecting against splashes, dirt and damage.

Product durability: can be estimated on the basis of the product wear and tear. Considering various use intensities and environmental factors, such as sunlight, rain, etc., it is not possible to provide a precise span. The product retains its protective properties up to the moment of a damage which cannot be repaired without decreasing its protective level.

Occurrence of mechanical damages means that the product should be repaired or immediately withdrawn from use. With proper warehousing the date of production (in the case of product containing polyurethane up to 3 years). This period may be extended by performing the appropriate tests.


Date of manufacture is indicated on the packaging or the product. This is with the third and fourth digits indicate month of manufacture, and the subsequent four digits identify the manufacturing number. Other digits together with the above identify the number of batch.

The access to the EU declaration of conformity can be accessed at support.rawpol.com.

In the event that this manual is out-of-date because of changes in law or other factors, download the new version. Current instructions are available on the rawpol.com or support.rawpol.com. This manual is marked with version v.LOCB.104, where LOCB is the identifier of product group and 104 the subsequent version number. Before starting operation, verify having current/appropriate operation manual for the product. read this manual carefully and keep it for duration of the use of protection. Do not use a damaged or worn product. The product does not have additional equipment and spare parts.

Materials, from which the product is made shall not unfavorably impact the user's health or hygiene. However each substance contained in the product's material or which is the component of the product may be the allergen, e.g. cotton, leather, metal elements, latex, dyestuffs etc. We recommend to try out this product for people who are especially susceptible.

How to put:

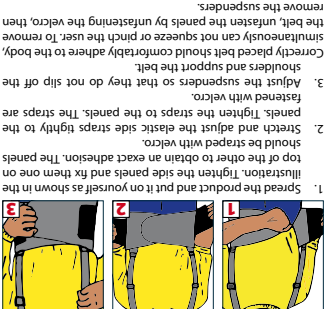

1. Spread the product and put it on your shoulders as shown in the illustration. Tighten the side panels and fix them one on top of the other to obtain an exact adhesion. The panels should be strapped with velcro.
2. Stretch and adjust the elastic side straps tightly to the panels. Tighten the straps to the panels. The straps are fastened with velcro.
3. Adjust the suspenders so that they do not slip off the body. suspenders and support the belt. Correctly placed belt should comfortably adhere to the body, simultaneously can not squeeze or pinch the user. To remove the belt, unfasten the panels by unfastening the velcro, then remove the suspenders. The product should be of sufficient size, which must be adjusted before starting operation. The product size is provided directly on the product or on internal label or packaging. Full size range is provided in the tables available on rawpol.com

Size: The product should be of sufficient size, which must be adjusted before starting operation. The product size is provided directly on the product or on internal label or packaging. Full size range is provided in the tables available on rawpol.com

Intended use: Protection against the following minimal risks: superficial mechanical injury that do not need medical attention, e.g. scratches resulting from bumping into fixed obstacles, minor injuries and abrasions etc, which may occur during work e.g. when moving under various types of conditions. The level of protection was obtained on the basis of tests carried out according to conditions described in the norms/specifications to which they apply. The product provides protection against the above risks and it is intended for use in the environments in which they occur. Please always carry out a risk assessment in a given work environment to verify whether the product provides protection against all risks and dangers not mentioned in the instructions is not guaranteed. Attention! The product is not a medical device, should not be used for therapeutic purposes.

Use and operation: The personal responsibility of the user ensures the protective function of the product. If the product is worn together with the protective clothing against special threats, the total protection features depending on the destination need to be guaranteed. In any case the requirements take precedence. Before use, check on your own responsibility condition of the belt and whether the product is suitable for working activities, complete and all protective functions are guaranteed. Check it for damage, which could have a negative impact on the safety functions (e.g. cracks, holes, ripped seams, broken fasteners, abrasions). If there is such a negative impact, before use, restore the original, valid state of the product for this purpose please contact with safety experts, the manufacturer or the authorized representative of the manufacturer), and if this is not possible, replace it. During work, pay attention to the behaviour of the protective ring work, the manufacturer), and if this is not possible, replace it. Do not use a damaged or worn product. The product does not have additional equipment and spare parts.

Product description: Safety belt. Detailed characterisation of the product is provided in rawpol.com.
Intended use: Protection against the following minimal risks: superficial mechanical injury that do not need medical attention, e.g. scratches resulting from bumping into fixed obstacles, minor injuries and abrasions etc, which may occur during work e.g. when moving under various types of conditions. The level of protection was obtained on the basis of tests carried out according to conditions described in the norms/specifications to which they apply. The product provides protection against the above risks and it is intended for use in the environments in which they occur. Please always carry out a risk assessment in a given work environment to verify whether the product provides protection against all risks and dangers not mentioned in the instructions is not guaranteed. Attention! The product is not a medical device, should not be used for therapeutic purposes.

Standards: Internal technical specification of the manufacturer: RS212101:2019.
Standards: Internal technical specification of the manufacturer: RS212101:2019.

Product description: Safety belt. Detailed characterisation of the product is provided in rawpol.com.
Intended use: Protection against the following minimal risks: superficial mechanical injury that do not need medical attention, e.g. scratches resulting from bumping into fixed obstacles, minor injuries and abrasions etc, which may occur during work e.g. when moving under various types of conditions. The level of protection was obtained on the basis of tests carried out according to conditions described in the norms/specifications to which they apply. The product provides protection against the above risks and it is intended for use in the environments in which they occur. Please always carry out a risk assessment in a given work environment to verify whether the product provides protection against all risks and dangers not mentioned in the instructions is not guaranteed. Attention! The product is not a medical device, should not be used for therapeutic purposes.

Use and operation: The personal responsibility of the user ensures the protective function of the product. If the product is worn together with the protective clothing against special threats, the total protection features depending on the destination need to be guaranteed. In any case the requirements take precedence. Before use, check on your own responsibility condition of the belt and whether the product is suitable for working activities, complete and all protective functions are guaranteed. Check it for damage, which could have a negative impact on the safety functions (e.g. cracks, holes, ripped seams, broken fasteners, abrasions). If there is such a negative impact, before use, restore the original, valid state of the product for this purpose please contact with safety experts, the manufacturer or the authorized representative of the manufacturer), and if this is not possible, replace it. During work, pay attention to the behaviour of the protective ring work, the manufacturer), and if this is not possible, replace it. Do not use a damaged or worn product. The product does not have additional equipment and spare parts.

Product durability: can be estimated on the basis of the product wear and tear. Considering various use intensities and environmental factors, such as sunlight, rain, etc., it is not possible to provide a precise span. The product retains its protective properties up to the moment of a damage which cannot be repaired without decreasing its protective level.

Occurrence of mechanical damages means that the product should be repaired or immediately withdrawn from use. With proper warehousing the date of production (in the case of product containing polyurethane up to 3 years). This period may be extended by performing the appropriate tests.

Date of manufacture is indicated on the packaging or the product. This is with the third and fourth digits indicate month of manufacture, and the subsequent four digits identify the manufacturing number. Other digits together with the above identify the number of batch.

The access to the EU declaration of conformity can be accessed at support.rawpol.com.

In the event that this manual is out-of-date because of changes in law or other factors, download the new version. Current instructions are available on the rawpol.com or support.rawpol.com. This manual is marked with version v.LOCB.104, where LOCB is the identifier of product group and 104 the subsequent version number. Before starting operation, verify having current/appropriate operation manual for the product. read this manual carefully and keep it for duration of the use of protection. Do not use a damaged or worn product. The product does not have additional equipment and spare parts.

Materials, from which the product is made shall not unfavorably impact the user's health or hygiene. However each substance contained in the product's material or which is the component of the product may be the allergen, e.g. cotton, leather, metal elements, latex, dyestuffs etc. We recommend to try out this product for people who are especially susceptible.

How to put:



1. Spread the product and put it on your shoulders as shown in the illustration. Tighten the side panels and fix them one on top of the other to obtain an exact adhesion. The panels should be strapped with velcro.
2. Stretch and adjust the elastic side straps tightly to the panels. Tighten the straps to the panels. The straps are fastened with velcro.
3. Adjust the suspenders so that they do not slip off the body. suspenders and support the belt. Correctly placed belt should comfortably adhere to the body, simultaneously can not squeeze or pinch the user. To remove the belt, unfasten the panels by unfastening the velcro, then remove the suspenders. The product should be of sufficient size, which must be adjusted before starting operation. The product size is provided directly on the product or on internal label or packaging. Full size range is provided in the tables available on rawpol.com

Size: The product should be of sufficient size, which must be adjusted before starting operation. The product size is provided directly on the product or on internal label or packaging. Full size range is provided in the tables available on rawpol.com

5 9075221928735



in any doubts please contact the manufacturer. The product size is provided directly on the product or on internal label or packaging. Full size range is provided in the tables available on rawpol.com

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.

PLEASE READ THE CURRENT/OPERATION MANUAL FOR THE USER. THIS MANUAL CAN BE REPEATEDLY COPIED IN ORDER ANY USER CAN READ THE INFORMATION INCLUDED HEREIN.



Manufacturer / Hersteller / Producent:
RAW-POL, 96-200 JULIANÓW, 50, POLAND
rawpol.com

EN INSTRUCTION AND INFORMATION FOR THE USERS

Manufacturer: RAW-POL STĘPŃSKI SPÓŁKA JAWNY, 96-200 Julianów, 50, Poland
This product belongs to the Personal Protective Equipment (PPE), defined in the Regulation (EU) 2016/425 of the European Parliament and of the Council and meets the guidelines of that regulation. It was classified to category I – only for the minimal risks.

Standards: Internal technical specification of the manufacturer: RS212101:2019.
Intended use: Protection against the following minimal risks: superficial mechanical injury that do not need medical attention, e.g. scratches resulting from bumping into fixed obstacles, minor injuries and abrasions etc., which may occur during work e.g. when moving under various types of construction. The level of protection was obtained on the basis of tests carried out according to conditions described in the norms/specifications to which they apply. The product provides protection against the above risks and it is intended for use in the environments in which they occur. Please always carry out a risk assessment in a given work environment to verify whether the product provides protection against all risks available in this environment.

Restrictions: Do not use the product other than in accordance with the intended purpose, recommendations in the product manual and high-risk (for which it is appropriate to apply) measures to protect individual category II and III) and when the type of work is related to the risk of parts of machines and such PPE being caught is associated with a health or safety hazard. This product does not protect parts of the body, which it does not cover. Protection against risks and dangers not mentioned in the instructions is not guaranteed. Attention! The product is not a medical device, should not be used for therapeutic purposes.
Use and operation: The personal responsibility of the user ensures the protective function of the product. If the product is worn together with the protective clothing against special threats, the total protection features depending on the destination need to be guaranteed. In any case the requirements for working activities, complete and whether the product is suitable for working activities, should be checked by the user. The user should take precedence. Before use, check on your own responsibility the condition of the belt and whether the product is suitable for working activities, which could have a negative impact on the safety functions (e.g. cracks, holes, frayed seams, broken fasteners, abrasions). If there is such a negative impact, before use, restore the original, valid state of the product for this purpose please contact with safety experts, the manufacturer or the authorized representative of the manufacturer, and if this is not possible, replace it. During work, pay attention to the behaviour of the protective ring work, the manufacturer, and if this is not possible, replace it. Do not use the product for the behaviour of the protective ring work, where L.O.C.B. is the identifier of product group and 104 the subsequent version number. Before starting operation, verify having current/appropriate manual for the product. Do not use the product for protection. Do not use a damaged or worn product. The product does not have additional equipment and spare parts.
Materials: from which the product is made shall not unfavorably impact the user's health or hygiene. However, each material used in the product's material or which is the component of the product may be the allergen, e.g. cotton, leather, metal elements, latex, dyestuffs etc. We recommend to try out this product for people who are especially susceptible. The product should be of sufficient size, which must remove the suspenders.


Size: The product should be of sufficient size, which must remove the suspenders.
How to put:
1. Illustration, tighten the side panels and fix them one on top of the other to obtain an exact adhesion. The panels should be strapped with velcro.
2. Stretch and adjust the elastic side straps tightly to the panels. Tighten the straps to the panels. The straps are fastened with velcro.
3. Adjust the suspenders so that they do not slip off the body, suspenders and support the belt.
Correctly placed belt should comfortably adhere to the body, simultaneously can not squeeze or pinch the user. To remove the belt, unfasten the panels by unfastening the velcro, then remove the suspenders.

Product description: Safety belt. Detailed characterisation of the product is provided in rawpol.com.
Intended use: Protection against the following minimal risks: superficial mechanical injury that do not need medical attention, e.g. scratches resulting from bumping into fixed obstacles, minor injuries and abrasions etc., which may occur during work e.g. when moving under various types of construction. The level of protection was obtained on the basis of tests carried out according to conditions described in the norms/specifications to which they apply. The product provides protection against the above risks and it is intended for use in the environments in which they occur. Please always carry out a risk assessment in a given work environment to verify whether the product provides protection against all risks available in this environment.

Product durability: can be estimated on the basis of the product wear and tear. Considering various use intensities and environmental factors, such as sunlight, rain, etc., it is not possible to provide a precise span. The product retains its protective properties up to the moment of a damage which cannot be repaired without decreasing its protective level. Occurrence of mechanical damages means that the product should be repaired or immediately withdrawn from use. With proper warehousing the date of production (in the case of product containing polyurethane up to 3 years). This period may be extended by performing the appropriate tests.
Date of manufacture: is indicated on the packaging or the product. This is with the third and fourth digits indicate month of manufacturing, and the subsequent four digits identify the manufacturing number. Other digits together with the above identify the number of batch.
Access to the EU declaration of conformity: can be accessed at support.rawpol.com.

Reading information included in the current/correct operation manual: Do not start operation without reading information included in the current/correct operation manual. This manual can be repeatedly copied in order any user can read the information included herein.

How to put:
1. Spread the product and put it on yourself as shown in the illustration. Tighten the side panels and fix them one on top of the other to obtain an exact adhesion. The panels should be strapped with velcro.
2. Stretch and adjust the elastic side straps tightly to the panels. Tighten the straps to the panels. The straps are fastened with velcro.
3. Adjust the suspenders so that they do not slip off the body, suspenders and support the belt.
Correctly placed belt should comfortably adhere to the body, simultaneously can not squeeze or pinch the user. To remove the belt, unfasten the panels by unfastening the velcro, then remove the suspenders.

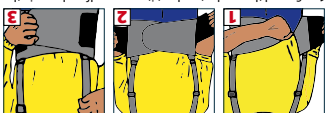

in any doubts please contact the manufacturer in order any user can read the information included herein.



